

Instructions For Use

• English



UNIVERSAL TV REMOTE CONTROL

Thank you for using our company remote controller products. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setup. If it could not work well, it should be set with the following methods before controlling your TV. This remote controller would not lose its memory when you change batteries, no need to reset.

Setting Of The Remote Control

A> Manual input of the corresponding code

- 1** Turn on the power switch of your television and let the television play properly.



- 2** Find out the brand code of your television in the code table. For example, if your television brand is AIWA, the first code is 410;

 
CODE LIST

AIWA	410	411,41
	413	414

- 3** Press and hold "SET" key until the indicator light is on (about 3 seconds);



- 4** Input the three-digit code found out one by one, such as 410.

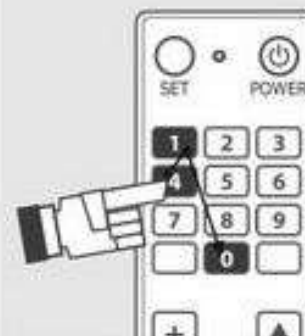

(Note: the light will flash once for the input of each digit, and if the code is effective, the light will be off, and the setup is completed; if the code is not effective, re-enter the code after quickly flashing for three times.. If it is the other invalid key, re-enter it after quickly flashing for three times.)

 
- 5** Check whether the keys of the remote control are normal, and if they are normal, it means that the setup corresponding is successful; if there are some function keys that can't be used normally, please repeat step 2 to step 4 to input the next group of code corresponding brand.

B> Manual search of the corresponding code


- 1** Turn on the power switch of your television and let the television play properly.




- 2** Press and hold "SET" key until the indicator light is on (about 3 seconds);

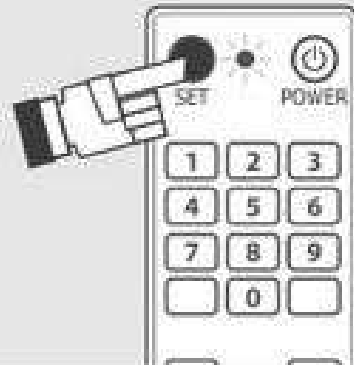

 - 3** Aim the remote control at the infrared receiving window of the television and press "VOL+" key continuously;

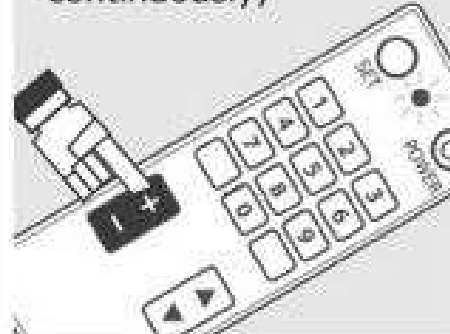

 - 4** When the symbol of volume up appears on the screen of the television, press the "SET" key.

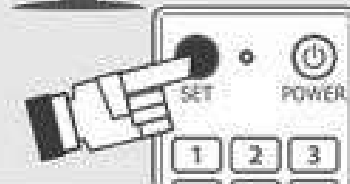


- 5** Check whether the keys of the remote control are normal, and if they are normal, it means that the setup corresponding is successful; if there are some function keys that can't be used normally, please repeat step 2 to step 4.

C> Fully automatic search of codes

- 1** Turn on the power switch of your television and let the television play properly.



 - 2** Aim the remote control at the infrared receiving window of the television and press and hold "SET" key, about 6 seconds later, the indicator light will begin to flash and you can enter the mode of automatic search; until the symbol of volume up appears on the screen of the television, release "SET" key, and the indicator light will be off.

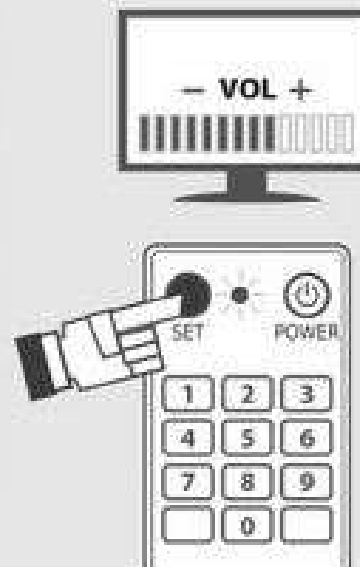

- 3** Check whether the keys of the remote control are normal, and if they are normal, it means that the setup corresponding is successful; if there are some function keys that can't be used normally, please repeat step 2.

D> Point-to point search of brand codes

- 1 Turn on the power switch of your television and let the television play properly.
- 2 Find out the corresponding key of the brand of your television from the following "brand table", for example, the corresponding key of SONY is "3" key; aim the remote control at the infrared receiving window of the television and press and hold it, about 6 seconds later, the indicator light will begin to flash and you can enter the mode of brand search; until the symbol of volume increasing appears on the screen of the television, release "3" key, and the indicator light will be off.
- 3 Check whether the keys of the remote control are normal, and if they are normal, it means that the setup-corresponding is successful; if there are some function keys that can't be used normally, please repeat step 2.



Known brand

① SAMSUNG	② PHILIPS	③ SONY	④ SHARP	⑤ PANASONIC	⑥ SANYO	⑦ NOBLEX
⑧ JVC	⑨ TOSHIBA	⑩ HISENSE	—/— PHILCO	Ⓢ HITACHI	MENU TCL	ⓧ LG

Restore factory settings

Press and hold "SET" key and press "0" key at the same time, release them after the indicator light is on for about 3 seconds; after the light flashes twice, set back and restore the factory state.